


Technical Information

➔ Better games through innovation!

www.tab.at

Programming instructions for EKEY switch lock system Fa. Rupp V2.x

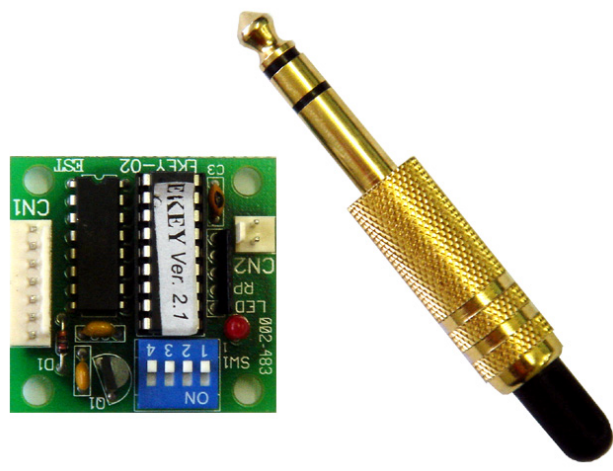

TAB-Austria Industrie- und Unterhaltungselektronik GmbH & CoKG

Haider Strasse 40, A-4052 Ansfelden

Tel.+43 (0)7229/78 040-0*, Fax +43 (0)7229/78 660, e-mail: sales@tab.at

Hotline: +43 (0)7229/78 040-250, e-mail: hotline@tab.at


T A B
A U S T R I A
www.tab.at



Programming key:

Exclusively programmed while in factory shipped state.
Is used to program the Service keys.

Service Key:

A **Service key** gives access to service- and booking functions at your machine.
Up to four service keys can be programmed and used.

Restore factory setting:

- Power OFF PCB.
- All DIP-Switch to ON position.
- Power ON -> red LED is active and goes off after app. 5 seconds.
- All DIP-Switches to OFF position.

Activating the Programming key:

The switch lock system must be in it's factory setting state. This state is recognized by a flashing LED (2x per second)!

Attention, if the LED does not flash, the programming key was already activated!

Activating the Service key(s):

This procedure must be repeated for each key individually.

- Select the Output channel by switching it's DIP-switch to ON position.
- Connect the **programming key** for 0,5 – 1 second → the LED flashes fast (20x per sec.)
- Disconnect the **programming key** and connect the **service key** you want to program for min. 1 second.
- The output signal will change to active state after service key is saved.
- Put DIP-switch to OFF position → programming is completed.

