


Technische Information

➔ Better games through innovation!

www.tab.at

Programming instructions EKEY Switch lock system TAB

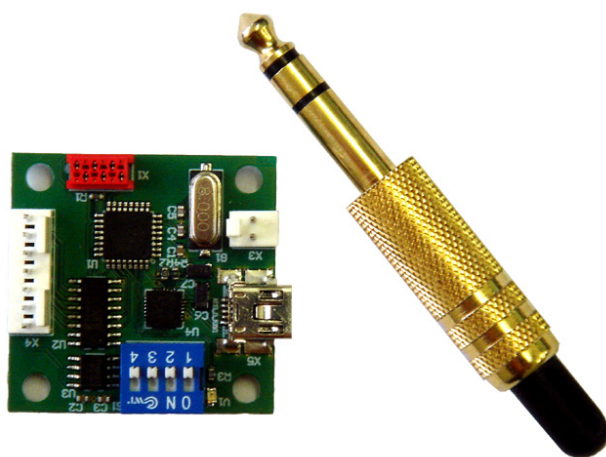

TAB-Austria Industrie- und Unterhaltungselektronik GmbH & CoKG

Haider Strasse 40, A-4052 Ansfelden

Tel.+43 (0)7229/78 040-0*, Fax +43 (0)7229/78 660, e-mail: sales@tab.at

Hotline: +43 (0)7229/78 040-250, e-mail: hotline@tab.at



T A B
A U S T R I A

www.tab.at



This switch lock system is designed to support up to four keys.

Erase all keys:

- Power off the PCB
- Put all DIP-switch to ON position
- Power ON the PCB
- LED is ON and will go OFF after approx. 5 seconds
- Put all DIP-switch to OFF position → **All keys are deleted**

Programming a service key:

This procedure must be repeated for each key individually.

- Put all DIP-switch to ON position
- Power ON the PCB
- Select the Output channel by switching it's DIP-switch to ON position
- The LED flashes (10x per sec.)
- Connect the **service key** you want to program
- The LED flashes slower (5x per sec.)
- Put DIP-switch to OFF position
- The LED lights constant and the output signal will change to active state → programming is completed

